


Fireriser[®] Indicator Post

Fig. No: IP0888

Materials List:

No	Name	Qty	Material
1	Locking Wrench	1	ASTM A126B
2	Operating Nut	1	ASTM B62
3	Hex Nut Screw	2	ASTM A105
4	Hex Nut	2	ASTM A105
5	Snap Ring	1	AISI 066
6	Target Carrier Nut	1	ASTM B62
7	Target	4	ASTM B108
8	Hex Cap Nut	4	ASTM A105
9	Window Glass	2	LEXAN-UN
10	Window Glass Gasket	2	PTFE
11	Hex Cap Screw	4	ASTM A105
12	Hex Nut	4	ASTM A105
13	Body	1	ASTM A536
14	Hex Cap Screw	6	ASTM A105
15	Hex Nut	6	ASTM A105
16	Base Flange	1	ASTM A126B
17	Hex Cap Screw	4	ASTM A105
18	Hex Nut	4	ASTM A105
19	Crane Coupling	1	ASTM A536
20	Cotter Pin	1	AISI 304
21	Stand Pipe	1	ASTM A53
22	Stem	1	AISI A1045
23	Plug	1	AISI 304
24	Cover	1	ASTM A126B
25	Locking Nose	1	ASTM 307 B

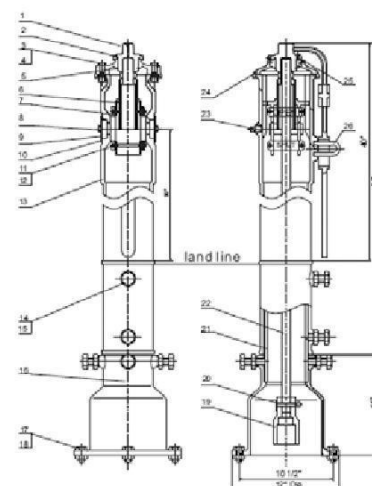

Field Adjustment:

1. Remove the top section from the top of the Indicator Post assembly.
2. Cut the required length off the bottom of the Standpipe for the Ground Line to match up with Standpipe Ground Line mark.
3. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
4. Reattach the Top Section to the top of the Indicator Post assembly.
5. Design and dimensions are subject to change without notice.
6. Manufactured by FIVALCO LTD who have the UL and FM approvals.

Design and materials subject to change without notice

Fivalco[®] and Fireriser[®] are Registered Trade Marks

Copyright Fivalco 2006